INSTALLATION INSTRUCTIONS

Model number parameter list

XALE Series

Model ¹	Input Voltage	Input Power (W)	Power Factor	Input Current	Weight (lbs)	Ambient rating
XALE-C100-MV Series	100 – 277VAC 50/60 Hz	100W	>0.9	1.5A	19.5	-40° to +40°C -40° to 104°F
XALE-C150-MV Series		150W		1.8A	19.5	
XALE-C230-MV Series		230W		2.5A	23	
XALE-C300-MV Series		300W		3.5A	29.5	
XALE-C100-HV Series	277 – 480VAC 50/60 Hz	100W		0.55A	19.5	
XALE-C150-HV Series		150W		0.88A	19.5	
XALE-C230-HV Series		230W		1.4A	23	
XALE-C300-HV Series		300W		1.8A	29.5	

¹ Where **C** represents CCT variations.

Warning:

To avoid electric shock:

- Be certain electrical power is OFF before and during installation and maintenance.
- Luminaire must be connected to a wiring system with an equipment-grounding conductor.


Warning:

To avoid the risk of fire, explosion, or electric shock, this product should be installed, inspected, and maintained by a qualified electrician only, in accordance with all applicable electrical codes.

Warning:

- Make sure the supply voltage is the same as the rated luminaire voltage.
 - Not suitable for hazardous location use.
 - Do not operate in ambient temperatures above those indicated on the luminaire nameplate.
- Keep lens tightly closed when in operation.

For supply connections use wire rated for at least 90°C (194°F)

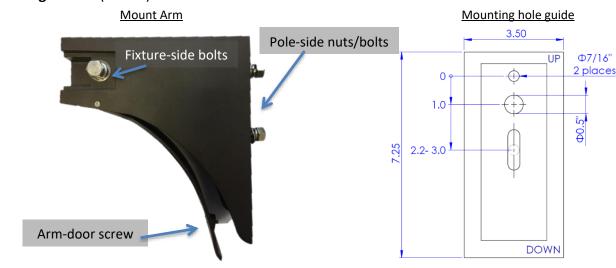

ARD Lighti

Lighting for life.

Visit us online at HowardLightingProducts.com or call us at 800.956.3456.

Mounting Details (inches):

Doc#1025-000244-000 RV0

04/12/2018

INSTALLATION INSTRUCTIONS

XALE Series

Installation Steps

- 1. Release arm-door screw (1 screw) to gain access to wiring compartment and pole-side nuts/bolts.
- 2. Mount arm to pole with supplied hardware. Ensure that it is tight, secure, and gasket is in place. (requires Metric #14 wrench)
- 3. Attach luminaire to the arm using supplied hardware. Transfer fixture wire inside the wiring compartment.
- 4. Ensure power is off, and then make electrical connections. Connect wires; white wire to "Neutral", black wire to "Line", green wire to "Ground".
- 5. Check that the lighting fixture is firmly installed and wired correctly.
- 6. Close the arm-door.
- 7. Finally, turn on power and verify function.

Mounting on round poles:

Use XAL-RPA accessory to mount this fixture on round poles, up to 5" diameter (sold separately)



Additional Product Images







100W, 150W Luminaire

230W Luminaire

300W Luminaire



Lighting for life.

Visit us online at HowardLightingProducts.com or call us at 800.956.3456.