


Independently  
Tested

**NRR 32**  
**SNR 38**



[www.finalfitsafety.com](http://www.finalfitsafety.com)  
833-346-2534

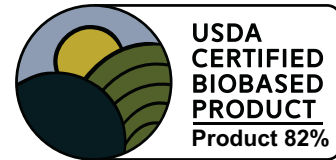

## The World's First Biobased Earplugs

Uncorded  
BSF-1  
200 Pair/Box



Corded  
BSF-30  
100 Pair/Box




*From the mind of  
hearing protection legend,  
Mr. Howard Leight*

- High NRR 32, Independently Tested.
- All parts - the earplugs, cords and bags - are biobased.
- Soft, smooth, low pressure for dreamlike comfort.
- Made in North America with USA and Canadian Materials.
- Available through respected Safety Suppliers worldwide.

## “Why on Earth Buy Any Other Earplugs?”

Independently  
Tested

**NRR 32**  
**SNR 38**

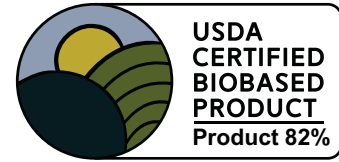

# The World's First Biobased Earplugs

BioSoft

Attenuation Data: Testing according to ANSI S3.19-1974										NRR 32  CSA AL
Frequency Hz	125	250	500	1000	2000	3150	4000	6300	8000	
Mean Attenuation	40.3	39.8	41.9	40.6	39.7	45.1	46.6	47.8	47.2	
Standard Deviation	5.5	5.4	5.8	3.8	2.6	4.1	3.7	3.5	4.5	

Test Method: EN352-2:2020 SNR 38 H=37 M=36 L=35									SNR 38
Frequency Hz	125	250	500	1000	2000	4000	8000		
Mean Attenuation	39.0	37.2	42.0	38.3	37.8	43.5	44.2		
Standard Deviation	5.6	5.0	5.3	4.1	3.0	4.1	4.8		

Part #	Pairs per Box	Boxes Per Case	Case Size	Case Weight
BSF-1 Uncorded	200	10	21"x16"x9 54.6cm x 41.3cm x 24.1cm	10 lbs 4.5 kg
BSF-30 Corded	100	10	21"x16"x9 54.6cm x 41.3cm x 24.1cm	10 lbs 4.5 kg

## ⚠ WARNING

- Laboratory attenuation data for comparison purposes only.
- User insertion and fit may result in significantly reduced results.
- Failure to follow all instructions could result in hearing loss or injury.
- Improper fit will reduce protection effectiveness and may result in hearing loss or injury.
- Only use Final Fit Safety hearing protection as a part of a hearing protection program complying with all applicable health and safety laws.
- Do not use where warning signals must be heard and may be attenuated by the product.
- Use extreme caution if you have previously experienced hearing loss/damage.
- Employers are responsible for ensuring that the hearing protection device and its NRR/SNR are proper for the worker.
- Failure to follow instructions and/or these warnings may result in injury or death.
- If redness, discomfort, or irritation occurs, discontinue use and seek medical attention.



3200 Airport Ave., Suite 16,  
Santa Monica, CA 90405

www.finalfitsafety.com  
833-346-2534

Hearing protection products tested  
by Michael & Associates, Inc.



Keep out of reach  
of children. Choking  
Hazard.